



Service Manual

Revised: February, 2005

For the complete PDF manual
please visit www.LaserPros.com.

Lexmark Optra™ C710

5016-001

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***



Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Edition: February 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark and Optra are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Color Jetprinter is a trademark of Lexmark International, Inc.

Other trademarks are the property of their respective owners.

© Copyright Lexmark International, Inc. 2000, 2005.

All rights reserved.

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550.

Table of Contents

Notices and Safety Information ix

Laser Notices ix

General Information 1-1

Models 1-2

Standard Features 1-2

 Tools Required For Service 1-6

Options 1-7

Operational Theory 1-8

 Interlock Mechanism 1-8

 Sheet Bypass Paper Feed Unit 1-9

 Paper Feed Unit 1-11

 Second Paper Feed Unit (Optional Paper Trays) 1-13

 Drive Block 1-17

 Contact Cam 1-18

 Coupling Unit 1-19

 Carriage Unit 1-21

 Toner Cartridge Unit 1-22

 Intermediate Transfer Unit 1-24

 Fuser/Paper Exit Unit 1-27

 Detecting New Cleaning Unit 1-28

 Duplex Unit (Option) 1-29

Diagnostic Information 2-1

Start 2-1

Service Error Codes 2-2

User Status Messages 2-7

User Attendance Messages 2-13

Symptom Tables 2-28

 Base Printer Symptom Table 2-28

 Covers Interlock Symptom Table 2-29

 Duplex Unit Symptom Table 2-29

 Operator Panel Symptom Table 2-30

 Paper Feed Symptom Table 2-30

 Paper Tray Options Symptom Table 2-31

 Power Symptom Table 2-31

 Print Quality Symptom Table 2-32

Service Checks 2-34

Base Printer Service Checks	2-35
Bypass Tray (Multipurpose Tray) Service Check	2-35
Carriage Unit Service Check	2-39
Coupling Unit Service Check	2-42
Cover Interlock Service Check	2-45
Developer/Paper Feed Motor Service Check	2-48
Erase Lamp Service Check	2-50
Fuser Cold Service Check	2-51
Fuser Drive and Contact Cam System Service Check	2-53
Fuser Hot Service Check	2-57
High Voltage Leakage Detect Service Check	2-58
ITM Drive Service Check	2-60
Main Fan Service Check	2-62
New Toner Cartridge Detection Service Check	2-63
Operator Panel Service Check	2-64
Operator Panel Buttons Service Check	2-65
OPC Drive Service Check	2-66
Paper Exit Sensor Service Check	2-67
Paper Feed Service Check	2-68
Parallel Port Service Check	2-71
Power Service Check	2-72
Printhead Service Check	2-77
Print Quality Service Checks	2-79
Print Quality Initial Service Check	2-79
All Black or Color Page Service Check	2-80
All Blank Page Service Check	2-81
Background Service Check	2-82
Black, Color Lines or Bands Service Check	2-83
Black or Color Spots Service Check	2-84
Developer Drive System Service Check	2-84
Evenly Spaced Horizontal Lines/Marks Service Check	2-85
Foggy Background Service Check	2-86
Low Image Density Service Check	2-87
Offset Print Service Check	2-88
Poor Color Reproduction Service Check	2-89
Random Marks Service Check	2-90
Residual Image Service Check	2-90
Skew Service Check	2-91
Toner on Backside of Page Service Check	2-91
Uneven Print Density Service Check	2-92
White Lines or Bands Service Check	2-92
White Spots Service Check	2-94
White/Black Lines Service Check	2-95

Serial Port Service Check	2-96
Toner Level Detect Service Check.....	2-96
Toner Low/Empty Sensor Service Check	2-97
Transfer Roll Service Check	2-98
Tray 1 (Integrated Tray) Service Check.....	2-99
Options Service Checks	2-106
Flash Memory Option(s) Service Check	2-106
DRAM Memory Option(s) Service Check.....	2-106
Hard Disk Option Service Check	2-107
Network Card Option Service Check.....	2-108
250/250 Dual Paper Tray Service Check.....	2-108
250/250 Paper Tray Symptom Table.....	2-109
Duplex Unit Option Service Check.....	2-120
Diagnostic Aids	3-1
Print Quality Test Pages	3-1
Paper Jam Sequence.....	3-1
Disabling Download Emulations.....	3-3
Diagnostics Menu Structure.....	3-3
Diagnostic Mode	3-4
Print Registration	3-6
Print Tests	3-8
Print Quality Test Pages	3-9
Hardware Tests	3-10
LCD Test	3-10
Button Test.....	3-10
Parallel Wrap Test	3-11
ROM Memory Test.....	3-12
SDRAM Memory Test	3-13
Serial Wrap Test	3-14
Duplex Tests	3-15
Quick Test	3-15
Duplex Feed 1	3-15
Duplex Feed 2	3-15
Device Tests	3-16
Quick Disk Test	3-16
Disk Test/Clean	3-17
Flash Test	3-18
Printer Setup	3-19
Setting the Page Count	3-19
Viewing the Permanent Page Count	3-19
Serial Number	3-19
Setting Configuration ID.....	3-20

Laser Power	3-21
Parallel Strobe Adjustment	3-21
Error Log	3-22
Viewing the Error Log	3-22
Clearing the Error Log	3-22
Restore EP Factory Defaults	3-22
Exiting Diagnostic Mode	3-23
Repair Information	4-1
Handling ESD-Sensitive Parts	4-1
Cover Removals	4-2
Cartridge Cover Removal	4-3
Front Cover Removal	4-3
Fuser Cover Removal	4-3
Left Side Cover Removal	4-3
Operator Panel Cover Removal	4-3
Rear Cover Removal	4-3
Right Side Cover Removal	4-4
Top Cover Removal	4-4
Top (Small) Cover Removal	4-4
Right Side Removals	4-5
Carriage Drive Motor Removal	4-6
Coupling Drive Motor Removal	4-7
Developer Drive Motor Assembly Removal	4-7
Fuser Drive Motor Removal	4-8
OPC Drive Motor Removal	4-9
Cam Sensor Removal	4-9
LVPS Assembly Removal	4-10
Main Fan Removal	4-12
Main Fan Mounting Bracket Removal	4-12
Motor Mounting Stay C Assembly Removal	4-13
OPC Coupling Drive Block Assembly Removal	4-14
Solenoid Removal	4-14
Left Side Removals	4-15
Grid Block 1 Assembly Removal	4-16
Grid Block 2 Assembly Removal	4-17
Cable Cover 3 Removal	4-18
Cover Interlock Switch Removal	4-18
Micro Switch Removal	4-18
Electronics Removals	4-19
Controller Board Assembly Removal	4-19
Engine Board Assembly Removal	4-19
HVPS Board Assembly Removal	4-20

Interconnect Board Assembly Removal	4-21
On/Off Coupling Sensor Board Removal	4-21
Paper Sensor Board	4-21
Resist Sensor Board Removal	4-22
Waste Toner Board Assembly Removal	4-22
Fuser Unit	4-23
Fuser Unit Removal	4-23
Fuser Lamp Removal	4-23
Thermistor and Thermostat Removal	4-23
Main Body	4-24
Paper Feed Block Assembly Removal	4-24
Printhead Removal	4-24
Print Cartridge Carousel Removal	4-25
Carriage Home Position Sensor Removal	4-26
Registration Roll Removal	4-27
Connector Locations	5-1
Engine Board	5-1
LVPS (Low Voltage Power Supply)	5-3
Erase Lamp Board	5-3
TRAY 1 Sensor Board	5-3
TRAY 1 Registration Sensor Board	5-4
Waste Toner Sensor Board	5-4
Belt Position Sensor Board	5-5
Connector Locations for Options	5-6
2nd Paper Option (250/250 Paper Option)	5-6
2nd Paper Option (250/250 Paper Option)	5-7
LVPS (Internal 2nd Tray Option)	5-7
Duplex Unit Option	5-8
LVPS (Internal Automatic Duplex Option)	5-9
Electrical Components	5-10
Sensor/Switch Locations	5-10
Printer Circuit Board Locations	5-13
Fan/Motor Locations	5-13
Solenoid/Clutch Locations	5-14
250/250 Paper Tray Option	5-15
Duplex Option	5-15
Cable Connections	5-16

Preventive Maintenance	6-1
Safety Inspection Guide	6-1
Service Precautions	6-1
Cleaning Procedures	6-1
Lubrication Specifications	6-1
Parts Catalog	7-1
How To Use The Parts Catalog	7-1
Assembly 1: Fuser	7-2
Assembly 2: Fuser	7-4
Assembly 3: Transfer	7-8
Assembly 4: Frames	7-10
Assembly 5: Frames Left Side	7-12
Assembly 6: Frames Right Side	7-16
Assembly 7: Frames Right Side 2	7-20
Assembly 8: Frames Right Side 3	7-24
Assembly 9: Carriage Block	7-26
Assembly 10: Base Frame	7-28
Assembly 11: Front Cover Assembly	7-30
Assembly 12: Front Cover Assembly 2	7-34
Assembly 13: Feed Unit	7-38
Assembly 14: Laser Scanner Unit	7-40
Assembly 15: Cassette	7-44
Assembly 16: Upper Covers	7-46
Assembly 17: Covers	7-50
Assembly 18: Covers / Frame 250 Tray Option	7-52
Assembly 19: Middle Roll Unit 250 Tray Option	7-56
Assembly 20: 250/250 Tray Option Lower Unit	7-58
Assembly 21: Duplex Unit Option 2	7-60
Assembly 22: Cassette Upper Section	7-64
Assembly 23: Cassette Rear Section 1	7-66
Assembly 24: Cassette Rear Section 2	7-68
Assembly 25: Duplex Option Lower Section 1	7-70
Assembly 26: Duplex Option Lower Section 2	7-74
Assembly 27: Duplex Option Lower Section 3	7-76
Assembly 28: Cassette Lower Section 4	7-78
Assembly 29: Duplex Option Lower Section 5	7-80
Assembly 30: Miscellaneous	7-84
Index	I-1

For the complete PDF manual
please visit www.LaserPros.com.